

## **WINFIELD ADJUSTABLE LANDING LEG EXTENSION**

### **Installation Instructions**

1. Securely hitch your fifth wheel to your truck, and safely raise the landing legs 3" to 5" off the ground.
2. Select which landing leg you want to install the leg extension on. Generally it is more convenient to install it on the landing leg closest to the landing leg switch, however it is personal preference.
3. Remove the landing leg footpad from the selected leg by removing the pin that holds the landing leg footpad on the landing leg.
4. Remove all bolts from the landing leg extension.
5. Insert the landing leg extension up into the selected landing leg tube. Check to make sure the holes align. If the holes do not align remove the insert and rotate it 90 degrees and re-insert it into the landing leg tube. In some cases you may need to make a slight hole adjustment. If the holes are slightly off, use a small round file to file the hole on the landing leg until the holes line up.
5. Insert a 3/8 x 1/2" bolt and star washer on each side of the leg extension. Tighten to 20 ft lbs.

**NOTE: If you also have Winfield Cross Brace Stabilizers, replace the 3/8 x 1/2" bolt on the inside of leg extension with the supplied 3/8 x 3/4" bolt. The longer bolt will hold the Cross Brace lower bracket to the landing leg.**

6. Rotate the leg extension to ensure that the leg extension rotates freely. If it does not rotate freely, remove the bolts and replace the star washer with the supplied split washer.
6. Re-install the landing leg footpad onto the bottom of the leg extension, using the original pin.

**For More detailed instructions go to [www.winfieldrvproducts.com](http://www.winfieldrvproducts.com)**

### **Proper Use:**

Level the fifth wheel from left to right utilizing blocks under the tires. Extend the landing legs 3 to 5" with the landing leg switch. Drop and pin the lower landing leg tube without the adjustable foot. Extend the landing leg with the jack motor until it is in contact with the ground. Drop and pin the lower landing leg tube with the Winfield Adjustable Foot. Adjust the length of the landing leg by rotating the footpad until it is in contact with the ground. Extend both landing legs with the jack motor.

**NOTE:** In preparation for travel rotate the landing leg footpad to make sure the Winfield Landing Leg Extension is fully retracted.